

MAHARASHTRA POLLUTION CONTROL BOARD

SUB REGIONAL OFFICE – Pimpri Chinchwad

Phone - (020) 25816451
Fax - (020) 25811029
Email : sropimprichinchwad@mpcb.gov.in
Visit At : <http://mpcb.gov.in>



2nd Floor, "Jog Center"
Wakadewadi Mumbai-Pune Road,
Pune - 411003.


LETTER OF BIO-MEDICAL WASTE AUTHORIZATION

[Authorization for Generation, Storage of Bio-Medical Wastes under Rule 7(4)]

- I. File number of authorization and date of issue
SRO-PIMPRI-CHINCHWAD/BMW_AUTH / 863000 546 Date: 23/03/2018
- II. **M/s. Krushna Hospital** Homehereby granted an authorization for generation of biomedical waste on the premises situated at 538/7, Jyotibanagar, Kalewadi, Pimpri, Pune-411017.
- III. This Authorization shall be in force for a period up to 31/01/2022 An application shall be made by the occupier/operator for renewal 3 Months before expiry of earlier authorization.
- IV. This Authorization is issued subject to compliance of the conditions stated below and to such other conditions as may be specified in the Rules for the time being in force under the Environment (Protection) Act, 1986.
- V. No of Beds: 05.

Terms and Conditions of Authorization

1. The authorized Person shall comply with the provisions of the Environment (Protection) Act, 1986, and the Rules made there under.
2. The Authorization shall be produced for inspection at the request of an officer authorized by the prescribed authority.
3. i) The authorized person shall not rent, lend or sell the biomedical waste or facility.
ii) The authorized person can transfer the BMW generated at above premises to the "Transporter" or "Operator of Facility" authorized by MPCB under Bio-Medical Waste (Management and Handling) Rules, 1998 for collection, transportation, treatment and/or disposal of BMW generated.
4. Any unauthorized change in equipment or working conditions as mentioned in the application by the person authorized shall constitute a breach of this Authorization.

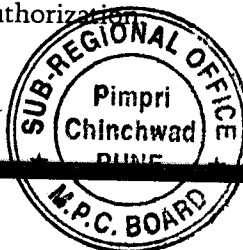

5. It is the duty of the authorized person to take prior permission of the prescribed authority to close down the facility.
6. The authorization is granted for generation of Bio-Medical Waste (BMW) in waste categories and quantities listed here in below :

Sr. No.	Category	Quantity	UOM	Treatment & Disposal
1	Cat-1 Human Anatomical Waste	1.0	Kg/M	Treatment & disposal through CBMWTSDf i.e. M/s. PASCO Environmental Solutions Pvt.Ltd,172,173,174,Y. C.M.Hospital, Gr. Floor,Sant Tukaram nagar, Pimpri -411018
2	Cat-4 Waste Of Sharps	0.5	Kg/M	
3	Cat-6 Solid Waste	2.0	Kg/M	
4	Cat-7 Solid Waste	2.0	Kg/M	

The occupier shall join the common BMW Treatment & Disposal Facility authorized by MPCB in Pimpri, i.e. M/s. PASCO Environmental Solutions Pvt. Ltd,172,173,174,Y.C.M.Hospital, Gr. Floor,Sant Tukaram nagar, Pimpri -411018, shall send the BMW regularly to CBMWTSDf for its scientific treatment & Disposal.

7. The liquid/solid waste generated from the treatment activity (from laboratory and washing, cleaning, housekeeping and disinfecting activities) shall be treated suitably by providing effluent treatment facility to conform the standards prescribed in Schedule V of said Rules and the Environment (Protection) Act, 1986. Cat-7 Solid Waste
8. (i) BMW shall be treated and disposed of in accordance with Schedule I; and in compliance with the standards prescribed in Schedule V of said Rules.
(ii) You shall setup requisite BMW treatment facilities like incinerator, autoclave / Microwave, shredder etc., at the disposal side in accordance with the BMW rules. You shall disposed of the duly treated BMW and incineration ash in secured land fill site at your own premises / at MSW secured land fill site of Municipal Council authorized by MPCB and duly earmarked for disposal of treated BMW / at common H.W. treatment & disposal facility setup as per the Hazardous Waste (M & H) Rules, 1989 as amended and authorized by MPCB.
9. (i) BMW shall not be mixed with other wastes or reused, recycled or sold in any form.
(ii) BMW shall be segregated into containers / bags at the point of generation in accordance with Schedule-II prior to storage, treatment and disposal. The containers shall be labeled according to Schedule III.
(iii) If a container containing BMW is to be transported from the premises where BMW is generated to any waste treatment facility outside the premises, the container shall, apart from the Label

prescribed in Schedule III, also carry information prescribed in Schedule IV and shall be transported by authorized Transporter only.

- (iv) Notwithstanding anything contained in the Motor Vehicles Act, 1988 or Rules there under, BMW shall be transported only in such vehicle as may be authorized for the purpose by the competent authority as specified by the Government.
- (v) No untreated BMW shall be kept stored beyond a period of 48 hours.

10. Standards for waste autoclaving:

The autoclave should be dedicated for the purposes of disinfecting and treating bio-medical waste,

- (I) When operating a gravity flow autoclave, medical waste shall be Subjected to:

- (i) a temperature of not less than 121 C° and pressure of 15 pounds per Square inch (psi) for an autoclave residence time of not less than 60 minutes; or
- (ii) a temperature of not less than 135 C° and a pressure of 31 psi for an autoclave residence time of not less than 45 minutes;
- or
- (iii) a temperature of not less than 149 C° and a pressure of 52 psi for an autoclave residence time of not less than 30 minutes.

- (II) When operating a vacuum autoclave, medical waste shall be subjected to a minimum of one pre-vacuum pulse to purge the autoclave of all air. The waste shall be subjected to the following.

- (i) a temperature of not less than 121 C° and a pressure of 15 psi for an autoclave residence time of not less than 45 minutes; or
- (ii) a temperature of not less than 135 C° and a pressure of 31 psi for an autoclave residence time of not less than 30 minutes; or

- (III) Medical waste shall not be considered properly treated unless the time, temperature and pressure indicators indicate that the required time, temperature and pressure were reached during the autoclave process. If for any reasons, time temperature or pressure indicates that the required temperature, pressure or residence time was not reached, the entire load of medical waste must be autoclaved again until the proper temperature, pressure and residence time were achieved.

- (IV) *Recording of operational parameters*, - Each autoclave shall have graphic or computer recording devices which will automatically and continuously monitor and record dates, time of day, load identification number and operating parameters throughout the entire length of the autoclave cycle.

- (V) *Validation test: Spore testing*. - The autoclave should completely and consistently kill the approved biological indicator at the maximum design capacity of each autoclave unit. Biological indicator for autoclave shall be Bacillus stearothermophilus spores using vials or spore strips, with at least 1×10^4 spores per milliliter. Under no circumstances will an autoclave have minimum operating parameters less than a residence time of 30 minutes, regardless of temperature and pressure, a temperature less than 121 C° or a pressure, less than 15 psi.

